



INSTALLATION INSTRUCTION


Plastic Insulators - Type MA

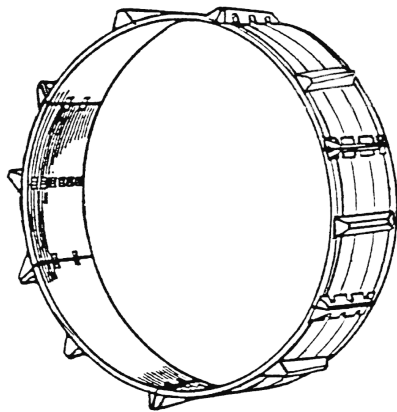

Ring of Insulator segments

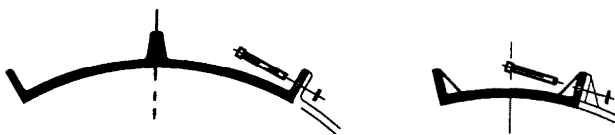

Example of segment MA

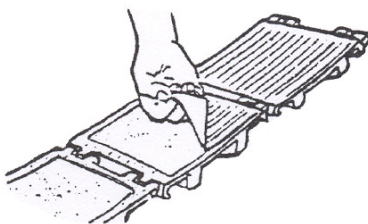

Antisliding Tape

1. **The delivery**
Each carton contains the required number of bolts that will be needed for mounting.
2. **Front assembling**
Assemble bolts in all connections of segments, except from the last segment. Screw the nut approx. 1/3 onto the bolt so that the segment chain is loose.
3. **Anti-sliding Tape**
If needed mounting with anti-sliding tape, lay the chain of segments, with the inside facing up. Remove the liner on the anti-sliding tape.
4. **Mounting on media pipe**
Put the chain of segments tightly around the media pipe and install the last bolts. The nuts is screwed approx. 1/3 onto the bolt.
5. **Mounting**
The bolts are now tightened in sets with 4 - 5 turns at a time.
The bolts are tightened as tight as can be done by hand.
It is of no consequence to the function of the insulator ring that the joints do not fit perfectly together. It will stay put!